


Accessories List

Current Transformer



For user consumption
metering in Single-
phase M-Combiner
(MC100/MC100L)

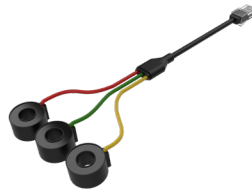

For user consumption
metering in Three-
phase M-Combiner
(MC100-T)

Parameters	Description
Nominal frequency	50/60Hz
Nomina primary current	80A
Turns ratio	2000:1
Rated load	10Ω
Accuracy	≤0.1%
Dimensions	29.5mm*16mm
Aperture	13.5mm
Maximum cable length	5,000±100 mm
Operation temperature	-30~85°C
Attitude	≤4000m


Disconnect tools



Used to disconnect PV DC connectors and AC connectors

- ① For disconnecting the AC cable connector
- ② For disconnecting the DC cable connector

M-Cable

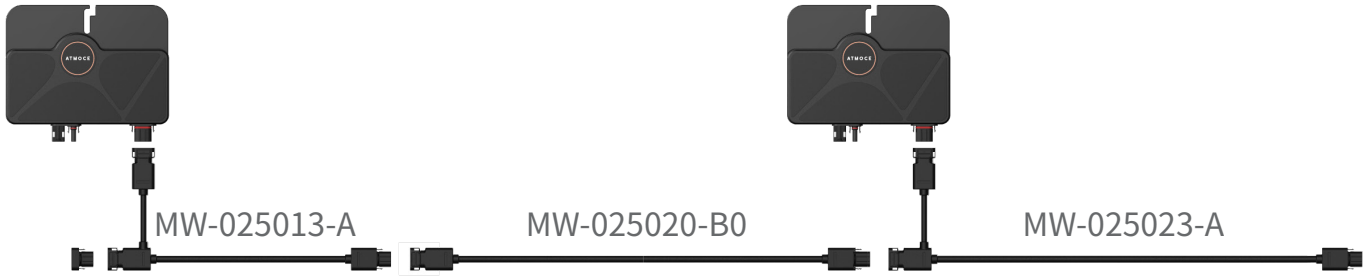

Model	Description			Scenario
	Type	Length	Copper conductor	
MW-025013-A	Three-terminal AC cable	1.3 m	2-core, 2.5 mm ²	Mounting PV modules in portrait
MW-025020-B0	Two-terminal AC cable	2 m	2-core, 2.5 mm ²	AC extension cable
MW-025023-A	Three-terminal AC cable	2.3 m	2-core, 2.5 mm ²	Mounting PV modules in landscape

Terminal Caps

Diagram	Type	Description
	Microinverter DC connector sealing cap (positive pole)	Usually covers the DC connector of the microinverter. When the microinverter needs to be installed, the sealing cap needs to be removed.
	Microinverter DC connector sealing cap (negative pole)	Usually covers the DC connector of the microinverter. When the microinverter needs to be installed, the sealing cap needs to be removed.
	Microinverter AC connector sealing cap	Usually covers the AC connector of the microinverter. When the microinverter needs to be installed, the sealing cap needs to be removed.
	M-Cable AC connector sealing cap	When connecting AC cables, cover the unused AC connectors.